Tools needed for the assembly of your Carousel Theater Chairs.

- 1 7/16" Socket or wrench for the back
- $1 \frac{1}{2}$ " Socket or wrench for the seat

Hardware needed for the assembly of your Carousel Theater Chairs.

- $4 \frac{1}{4}$ " x $\frac{1}{2}$ " Bolts for the back assembly
- $2 \frac{1}{2}$ " x 1" Bolts for the seat assembly











STEP 1: Mount your leg standards on 22- or 23- inch center to center layout to your floor. The actual distance will depend on the width of the chair you ordered.



Once you have mounted your leg standards to your floor you will want to attach your back on next.

Helpful Note:

You may want to leave your leg standard hardware a little loose until the back and seat are attached.

STEP 2: Attach the back to the leg standards.





2.1 Take 2 of the 4 Back bolts and finger tighten them about halfway into the Lower back wing holes on the back part of the leg.



2.2 Set the slot from the Back Wing onto the bottom bolt from step 2.1. Adjust the top part of the back so that at least one of the Back wing holes line up with the Upper Back wing hole on the standard. Use the last 2 back bolts to attach the back to the standard, finger tighten. When back is attached, tighten with the 7/16" socket or wrench.


STEP 3: Mounting the Seat





3.1

Rest the Seat Ear on top of the flat (3.1) area (3.2) where you will also find a pre-threaded

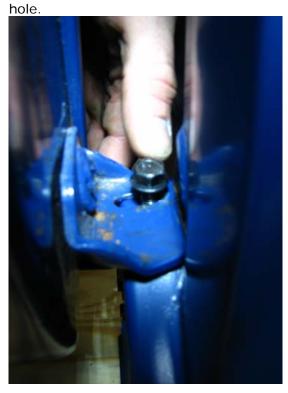

3.3

Insert Seat bolt and finger tighten both sides before using the $1\!\!2''$ socket or wrench to completely tighten seat to standard.

This is what the completed chair will look like.



If you need assistance with assembly or installation please call our sales office. We are available Monday – Friday 9 AM to 5 PM EST.

www.SeatsandChairs.com

Toll-Free: 1-800-632-7657 Office: 727-393-0400 Fax: 727-393-9600

Email: info@seatsandchairs.com