



## Assembly Instruction


### ASSEMBLY TIPS :

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

### ▲ Warning !

1. Don't attempt to repair or modify parts that are broken or defectives. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

### Step 1

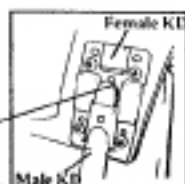

\* The female KD bracket is bolted to the back frame and is Silver in colour.

- 1) Rest the back frame on the arms of the chair. This will give you a good view of the male and female K D brackets.
- 2) Locate female K D bracket onto male K D on one side to a depth of 5-10mm.
- 3) While keeping the back leaning forward locate the other side to a depth of 5-10mm.
- 4) As you straighten the back to a vertical position allow the back to drop down evenly on both sides.

### Step 2




- 1) The back should be resting evenly on the K D brackets.
- 2) Push on the top of the back frame to lock into position.
- 3) It may be necessary to hit the top of the back frame directly in line with the support rails with an open hand to securely lock the back into position.
- 4) When back is secured you should be able to lift the chair by the back frame. (be careful)

### Step 3




- 1) Secure the outside back cover to the base of the Recliner along the Velcro tabs.

### Step 4

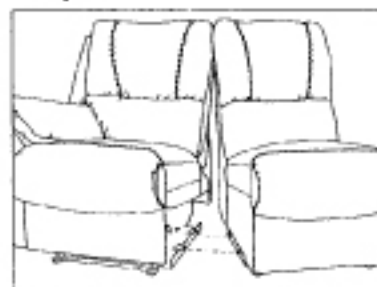


- 1) Fasten the base K D brackets by inserting the bolts of male K D into the grooves of female K D.
- 2) It maybe necessary to press the top of the back frame in order to lock the K D brackets into position.

## Reclining Instruction

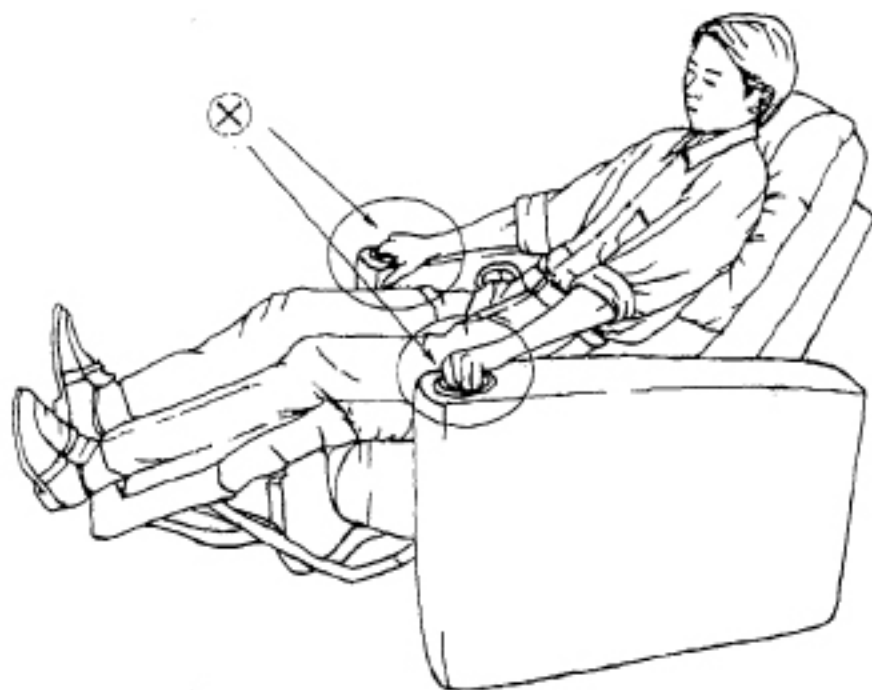

⊗ Do not recline by pushing the arm-rest with hands .

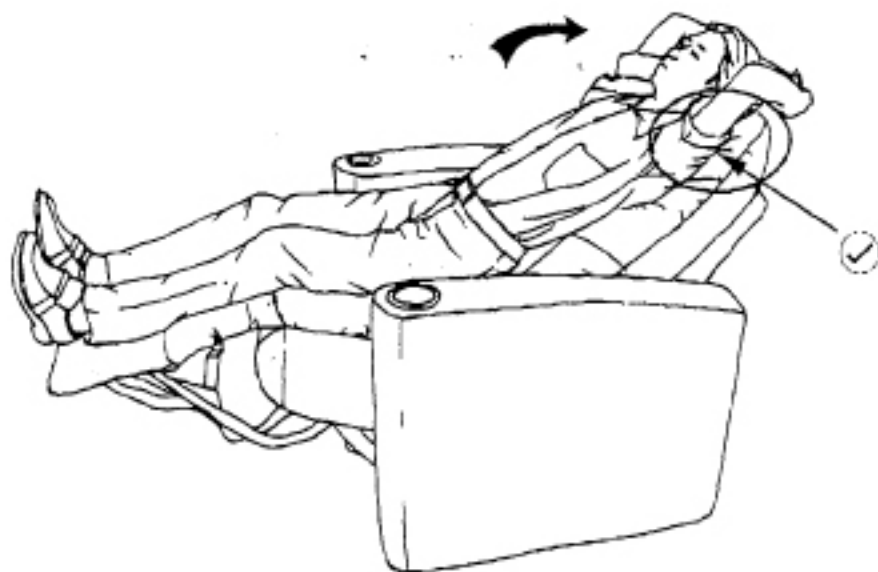

✓ Sit backward and release the trigger .  
Use the strength of shoulders to recline .